DIRECTOR'S SHOWCASE

3' Space Saver Podium

Maximum occupancy: 1 person
Maximum load: 300lbs.

Packing list:

1 - Space Saver Podium

2 - Wheel Plates

2 - 7" Wheels

1 - Boundary Rail

1 - Stabilizer Bar

2 - Axle Bolt with nut

6 - 1/4" x 2" Hex Head Bolt

6 - 1/4" Nylon Lock Nut

6 - 1" Flat Washer

2 - Wing Nuts

2 - 5/8" Washers

Adhesive Non-Skid Tape

Tools needed:

Two 7/16" wrenches/sockets
(for 1/4" nuts and bolts)
3/4" wrench/socket (for axle bolt)
9/16" wrench/socket (for axle nut)

see reverse side for assembly instructions

ASSEMBLING YOUR SPACE SAVER PODIUM

Step 1: Attach the Stabilizer Bar(s) to the Space Saver Podium

Place the stabilizer bar(s) on the ground (screws up) and align the holes of the podium with the screws on the stabilizer bars. Use two of the 1/4" nylon lock nuts to fasten the podium to the stabilizer bar.

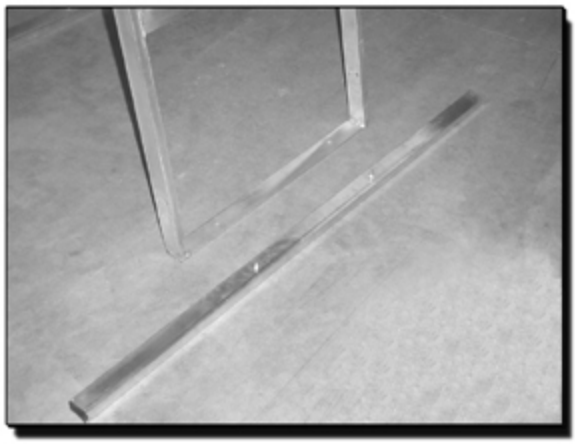

Step 2: Attach the wheel plates

Using two 1/4" x 2" bolts per plate and two 1/4" nylon lock nuts

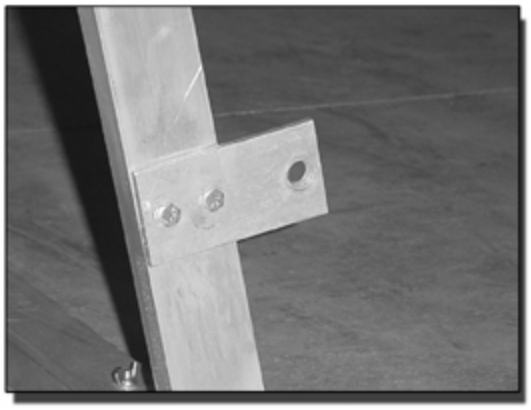

Step 3: Attach the wheels

Using one axle bolt per wheel and two 1/4" nylon lock nuts

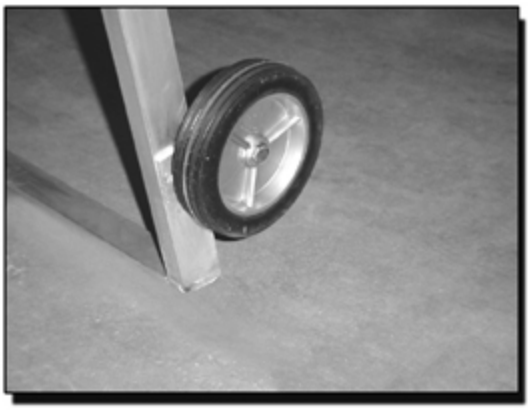

Step 4: Attach the boundary rail

Using two 1/4" x 2" bolts, two washers and two 1/4" nylon lock nuts

Step 5: Attach the non-skid tape

Attach one piece of tape to each step